

6-3. Initialization Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

| Item | When to initialize | Reference |
|------------------------------|--|-----------|
| Intuitive parking assist | <ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse | P. 555 |
| Engine oil maintenance data | <ul style="list-style-type: none">• After changing engine oil | P. 464 |
| Tire pressure warning system | <ul style="list-style-type: none">• When changing the tire inflation pressure by changing traveling speed or load weight, etc. | P. 477 |

6-3. Initialization